


CLICKITS™

INSTRUCTIONS


1. Ensure there is no power supplied to any of the wires you are working with.
2. Make a clean, straight cut through all 3 wires.
Do not strip back any of the insulation.



3. Carefully separate the 3 wires.

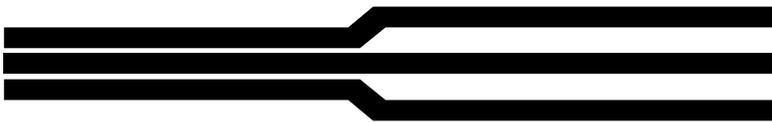


4. Insert 3 wires into the retainer holes in the clear top side, making sure they extend all the way to the middle hinge.

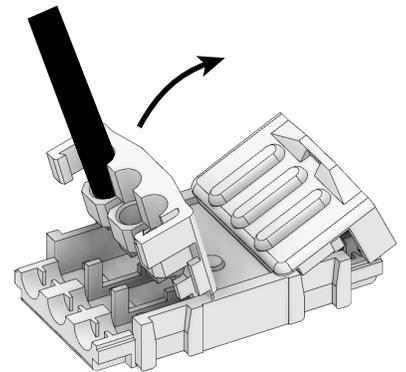


NOTE: You may need to open the clear top side wider if the wires don't make it to the middle hinge.

Looking down at the connector, the wires should extend close to the middle of the part.


Correct

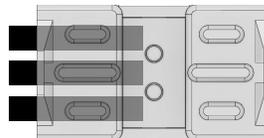

Incorrect

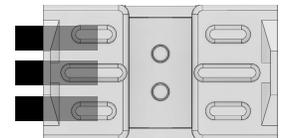

5. Use pliers to apply firm even pressure to close the connector and fully engage the wires.

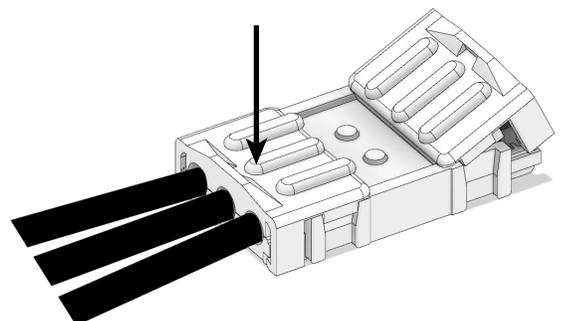

6. Repeat for other side of connector.