


# CLICKITS™

## CLICKITS V2 - INSTRUCTIONS

1. Ensure there is no power supplied to any of the wires you are working with.
2. Make a clean, straight cut through all 3 wires.  
Do not strip back any of the insulation. Do not separate the 3 wires.





*NOTE: Take care, and DO NOT lift the wings beyond their resting position. Doing so may cause the wings to snap.*

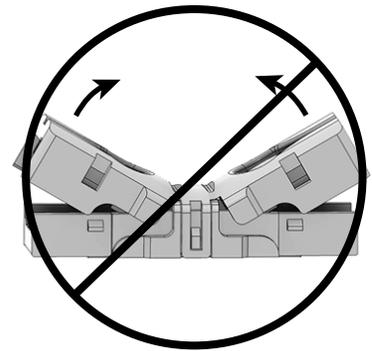


3. Insert the wires into the retainer holes in the clear top side, making sure they extend all the way to the middle hinge.

*NOTE: Looking down at the connector, the wires should extend close to the middle of the part.*

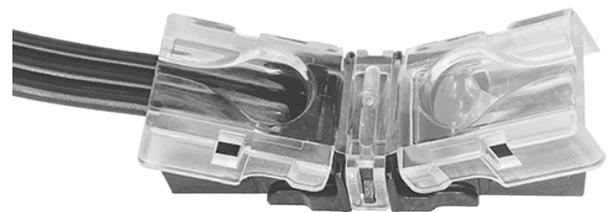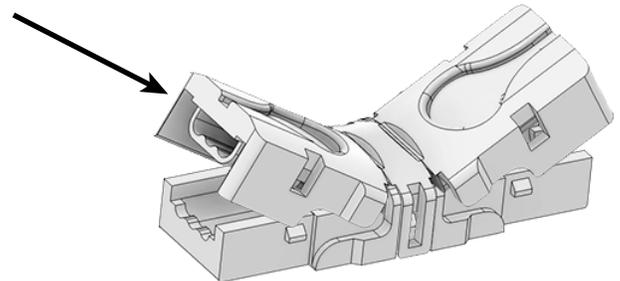

4. Use pliers to apply firm even pressure to close the connector and fully engage the wires.

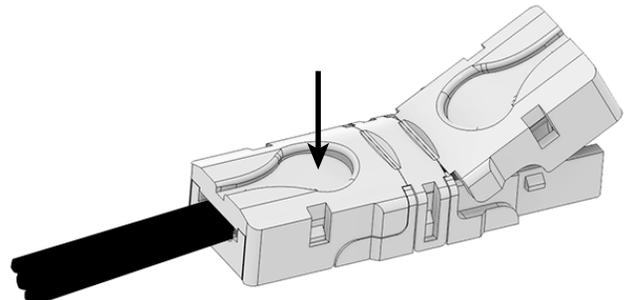

5. Repeat for other side of connector.